



OPTION	DESCRIPTION	DEFAULT	PAGE
P00E	FOLLOW ME telephone number	–	39
P01E-P08E	Enable Radio Devices 1–8	–	56
P09E	Enable Radio Keys 1–8	–	57
P10E	Enable Radio Keys 9–15	–	
P11E	USER CODE 1 (MASTER CODE)	123	14
P12E	User Code 2	–	
P13E	User Code 3	–	
P14E	User Code 4	–	
P15E	User Code 5	–	
P16E	User Code 6	–	
P17E	User Code 7	–	
P18E	User Code 8	–	
P19E	User Code 9	–	
P20E	User Code 10	–	
P21E	User Code 11	–	
P22E	User Code 12	–	
P23E	User Code 13	–	
P24E	User Code 14	–	
P25E	User Code 15	–	
P26E	ENTRY DELAY TIME 1	20 Sec	15
P27E	Entry Delay Time 2	6=60 Sec	
P28E	EXIT DELAY TIME	60 Sec	
P29E	Siren Reset Time	5 min	
P30E	Normal Zone Sensitivity	all zones	16
P31E-P38E	Vibration Sensitivity. High–Low	–	
P39E	Double Trigger zones	–	17
P40E	Instant Zones	zones 3–8	17
P41E	ENTRY DELAY 1 ZONES	zone 1	
P42E	HANDOVER ZONES	zone 2	18
P43E	Entry Delay 2 zones	–	
P44E	Reset Lockout zones	all zones	
P45E	AREA 1 ZONES	all zones	20
P46E	AREA 2 zones	–	
P47E	AREA 1 user codes 1–8	all codes	21
P48E	AREA 1 user codes 9–15	all codes	
P49E	AREA 2 user codes 1–8	user code 1	
P50E	AREA 2 user codes 9–15	–	
P51E	MONITOR MODE zones	–	18
P52E	24hr zones	–	19
P53E	DAY MODE zones	–	
P54E	RESET Output zones	all zones	22
P55E	STROBE Output zones	all zones	
P56E	KEYPAD SONALERT zones	all zones	
P57E	SIREN zones	all zones	23
P58E	Aux1 zones	–	
P59E	Aux2 zones	–	

 These options are available in USER PROGRAM MODE.

 ALL options are available in INSTALLER PROGRAM MODE.

OPTION	DESCRIPTION	DEFAULT	PAGE
P60E	1E Entry beeps	ON	24,25
	2E Keyswitch Monitor/Disarm	OFF	
	3E Keyswitch Arm/Disarm	OFF	
	4E Tamper Siren Lockout	ON	
	5E Duress to Reset output	OFF	
	6E Auto Exclude zones	ON	
	7E Auto Keypad Display off	OFF	
	8E Delayed Arm1, Arm2 outputs	OFF	
P61E	1E Tamper to RESET output	ON	26
	2E Tamper to STROBE output	ON	
	3E Tamper to KEYPAD BEEPER	ON	
	4E Tamper to SIREN output	ON	
	5E Keypad Panic to RESET output	ON	
	6E Keypad Panic to STROBE output	ON	
	7E Keypad Panic to KEYPAD BEEPER	ON	
	8E Keypad Panic to SIREN output	ON	
P62E	1E Shortcut Memory Display	ON	27
	2E Shortcut Zone Exclude	ON	
	3E Shortcut Monitor Mode	ON	
	4E Shortcut Keypad Panic	OFF	
	5E Shortcut AREA1 Arming	ON	
	6E Shortcut AREA2 Arming	OFF	
	7E 2 sec. warning on Auto Exclude	ON	
	8E Exit Time x10	OFF	
P63E	1E Monitor alarms to RESET output	OFF	28
	2E Monitor alarms to STROBE output	OFF	
	3E Monitor alarms to KEYPAD BEEPER	OFF	
	4E Monitor alarms to SIREN output	OFF	
	5E Day alarms to RESET output	ON	
	6E Day alarms to STROBE output	ON	
	7E Day alarms to KEYPAD BEEPER	OFF	
	8E Day alarms to SIREN output	OFF	
P64E	1E Brief Monitor Alarm	OFF	29, 30
	2E Brief Day Alarm <small>(Also enables Temp Day Zones feature)</small>	OFF	
	3E Monitor zones have Entry Delay 2	ON	
	4E RADIO KEY SIREN CHIRPS	OFF	
	5E 50Hz mains frequency	ON	
	6E Double Key Keypad Panic	ON	
	7E Keypad Fire Alarm	OFF	
	8E Keypad Medical Alarm	OFF	
P65E	Supervised Radio Zones	–	31
P66E	1E Supervision alarm to RESET o/p	OFF	32, 33
	2E Supervision alarm to STROBE o/p	OFF	
	3E Supervision alarm to KP BEEPER	OFF	
	4E Supervision alarm to SIREN o/p	OFF	
	5E Supervision alarm to Aux1 o/p	OFF	
	6E Supervision alarm to Aux2 o/p	OFF	
	7E Supervision Speedup x6	OFF	
	8E Supervision Speedup x10	OFF	
P67E	Radio Supervision Time	24hrs	31

OPTION	DESCRIPTION	DEFAULT	PAGE
P68E	1E [D16 option only]	OFF	34, 35
	2E 3K3 End Of Line Resistors	OFF	
	3E Radio Key Toggles Aux1	OFF	
	4E Radio Key Pulses Aux1	OFF	
	5E Radio Arming Unseal Warning	OFF	
	6E 24hr Zones Fire Siren Sound	OFF	
	7E RK4 Radio Key AUX button to Aux1	OFF	
	8E Quiet Chirps on Radio Arm/Disarm	OFF	

P69E	1E Arm1 Output Pulses	OFF	36, 37
	2E Arm2 Output Pulses	OFF	
	3E Quiet Monitor Siren	OFF	
	4E 6 Beeps On Arming	OFF	
	5E Radio Key Arming Monitor Mode	OFF	
	6E Disable Mains Fail Alarm	OFF	
	7E RK4 AUX button Toggles Aux2	OFF	
	8E RK4 AUX button Pulses Aux2	OFF	

P70E	TELEPHONE NUMBER 1 (Primary)	–	38
P71E	Telephone Number 2	–	
P72E	ACCOUNT NUMBER 1	0000	
P73E	Account Number 2	0000	

P74E	REPORT ZONE ALARMS 1–8	all zones	40	
P75E	1-8 Report MISC. alarms	1E Report Duress alarms	OFF	41
		2E Report Medical alarms	OFF	
		3E Report Keypad & Keyswitch Panic	ON	
		4E Report Fire alarms	OFF	
		5E Report Panel Tamper alarms	ON	
		6E Report external Tamper alarms	ON	
		7E Report Keypad Tamper alarms	ON	
		8E Report Exit From Installer Mode	OFF	
P76E	Report Zone Restorals 1–8	all zones	40	
P77E	Report Misc Restorals 1–8	all ON	41	
P78E	Report Multiple Zone alarms	–	40	

P79E	Account Number 2 zones	–	40
P80E	Telephone No. 3 for Test Calls	–	39
P81E	Telephone No. 4 for Callback	–	39

P82E	1E Send Restoral Immediately	OFF	41
	2E Send Restoral after Siren Time	OFF	
	3E Send Restoral on Disarm & seal	OFF	
	4E Send Restoral on Disarm always	ON	

P83E	Test Call Interval	84=168hrs	42
P84E	Time Before Next Test Call	6=12hrs	

Also see P89E 1E, Enable Test Calls

P85E	1E Auto Dialling, Pulse or DTMF	ON	42
	2E Pulse Dialling always	OFF	
	3E DTMF Dialling always	OFF	

OPTION	DESCRIPTION	DEFAULT	PAGE
P86E	1E Disable Dialler	OFF	43, 44
	2E CONTACT ID FORMAT	ON	
	3E Audible DTMF format	OFF	
	4E AUDIBLE PULSE FORMAT	OFF	
	5E Contact ID & Audible DTMF	OFF	
	6E Contact ID & Audible Pulse	OFF	

P87E	1E Split Dial Primary/Sec. numbers	OFF	45
	2E Check For Dial Tone	ON	
	3E [not used]	OFF	
	4E Reduced Dialling Attempts	ON	

P88E	1E AREA 1 OPEN/CLOSE REPORTS	OFF	46, 47
	2E Area 2 Open/Close Reports	OFF	
	3E Siren Chirp on Kiss-Off	OFF	
	4E Flash Strobe on Kiss-Off	OFF	
	5E Forced Opening Report	ON	
	6E Delayed Closing Reports	OFF	
	7E Manual Exclude Reports	ON	
	8E Auto Exclude Reports	ON	

P89E	1E Enable Test Calls (Also see P83E, P84E)	ON	48, 49
	2E Mains Report Delay	ON	
	3E Listen-in to Dialler	OFF	
	4E Swinger Shutdown	ON	
	5E Telephone Line Fault Monitor	OFF	
	6E Line Fault Alarms to Aux2	OFF	
	7E Internal Timing	OFF	
	8E [not used]	OFF	

P90E	1E Enable Remote Access	OFF	50, 51
	2E Enable Direct Connect	OFF	
	3E Enable Remote Arming	OFF	
	4E Enable Remote Disarming	OFF	
	5E Enable Remote AUX Control	OFF	
	6E Enable Remote Status Report	OFF	
	7E Enable Remote Event Report	OFF	
	8E Enable Callback Mode	OFF	

P91E	Required Rings To Answer	1	52
-------------	--------------------------	---	----

P92E	1-14 Report MISC. alarms	1E Report Radio Tamper	ON	41
		2E Report radio Panic by User ID	ON	
		3E Report Radio Battery by Device	OFF	
		4E Report Radio Supervision Fail	OFF	
		5E Report Panel Low Battery	ON	
		6E Report Mains Fail	ON	
		7E [not used]	OFF	
		8E [not used]	OFF	

P93E	Report Misc. Restorals 9–14	all ON	
-------------	-----------------------------	--------	--

P94E	No Memory Warning zones	–	52
-------------	-------------------------	---	----

P95E	Clear Radio Devices		53
P96E	Clear Memory		
P97E	CLEAR PANEL OPTIONS (Except Radio Devices, User Codes or Radio Keys)		
P98E	Clear User Codes & Radio Keys		

P99E	Set Installer Code	000000	53
-------------	--------------------	--------	----