

Ness D8 Zone Excluding Summary

EXCLUDING ZONES

If a detector becomes faulty and cannot be secured when arming the panel, then its zone may be excluded so that it does not generate alarms.

Zone Excluded indicator will show a steady light. You may now exclude zones.

To enter Exclude mode press,

To exclude, say, zones 4 and 8, press the buttons...

<Exclude> <Enter>

<Exclude> <code> <Enter>

4 <Enter> 8 <Enter>

Zone lights 4 and 8 will turn on.

<Enter> to Exit Exclude Mode

NOTE: Excluding zones can only be done when the panel is disarmed.

All the lights will be turned off and then the

1. To exclude zones...

2. Press... Exclude ..Enter..

or

Exclude code ..Enter..

the Exclude light should be On

3. ENTER the zone/s to be EXCLUDED Zone No. ..Enter..

4. To EXIT press ENTER ..Enter..

If you make a mistake, enter the zone number again to remove it from your selection.

Zones which you exclude will be identified by the relevant zone indicator showing a steady light in the exclude mode.

NOTE: Your Control Panel may be programmed to automatically exclude faulty zones whenever you Arm. The Exclude light will flash as a warning or memory of the auto-exclusion. If Auto - Exclude is selected the outside Siren will sound for 2 seconds indicating a zone has Auto Excluded.

14